尺寸:100*100mm 材质:100克双胶 双面印刷



随波逐流(恢复默认后灯效)、如影随形、正弦光波、旋转风车、七彩瀑布、花开富贵、游戏模式、关闭、

• F	n组合键说明
-----	--------

Fn +	Esc	A	S	`~	1!
	长按35 恢复出厂设置	Win系统 Mac系统		长按3s 2.4G对码	无线设备1
	2@	3#	Ŷ	\downarrow	\rightarrow
	无线设备2	·备2 无线设备3 背光亮度+		背光亮度-	背光速度+
	←	=+	М	U	I
	背光速度-	背光颜色 切换	背光模式 切换	PRTSC	SCRLK
	0	Win	В		
	PAUSE	锁/解锁Win	按住查看电量 (未插入USB线)		

·Fn+Win=锁定/解锁Win键(在Windows系统下,锁定Win键时指示灯常亮,Win键无法使用)。 ·在Windows系统下,切换到Mac系统后,Win和Alt键位置互换(不锁Win),F1-F12为多媒体按键功能。 ·Fn+1!=无线设备1,短按切换,长按3s配对。 ·Fn+2@=无线设备2,短按切换,长按3s配对。 ·Fn+3#=无线设备3,短按切换,长按3s配对。

•Windows系统:Fn组合键说明(多媒体功能)

键位	F1	F2	F3	F4	F5	F6
单按	F1	F2	F3	F4	F5	F6
Fn组合	屏幕亮度-	屏幕亮度+	转换窗口	资源管理器	主页	邮箱
键位	F7	F8	F9	F10	F11	F12
单按	F7	F8	F9	F10	F11	F12
Fn组合	上一曲	播放/暂停	下一曲	静音	音量-	音量+

• Mac系统:Fn组合键说明(多媒体功能)

键位	F1	F2	F3	F4	F5	F6
单按	屏幕亮度-	屏幕亮度+	转换窗口	返回桌面	搜索 长按Siri	截屏
Fn组合	F1	F2	F3	F4	F5	F6
键位	F7	F8	F9	F10	F11	F12
单按	上一曲	播放/暂停	下一曲	静音	音量-	音量+
Fn组合	F7	F8	F9	F10	F11	F12

• 电量显示

•充电





·当【ESC】键红灯闪烁时,请及时给键盘进行充电。



③ Insert the USB end of the cable into the corresponding port on the computer to use it

Following the flow (restoring default lighting effects), following the crowd like a shadow, sinusoidal light waves, spinning windmills, colorful waterfalls, blooming flowers and wealth, game mode, off, constant light mode, breathing mode, In conjunction with the driver's RGB lighting effect with music rhythm, there are 10 lighting modes to choose from under this

•FN KEY COMBINATION DESCRIPTION

	Esc	A	A S		11
			Long press 3S Enter the 2.4GHz paring mode	Wireless device 1	
	2@	2@ 3# ↑		Ļ	÷
F	Wireless device 2 Wireless device 3		Backlight brightness+	Backlight brightness-	Backlight speed+
Fn +	←	=+	M	U	I
	Backlight Backlight color speed- switching		Backlight mode switching	PRTSC	SCRLK
	0	Win	в		
	PAUSE	Lock/Unlock Win	Press and hold to check battery level (USB cable not inserted)		

·Fn+Win=Lock/Unlock Win Key (In Windows systems, the indicator light remains on when the Win key is locked, and the Win key cannot be used).

In the Windows system, after switching to the Mac system, the positions of the Win and Alt keys are swapped (without locking Win), and F1-F12 is a multimedia button function.

- ·Fn+1! = Wireless device 1, short press to switch, long press for 3 seconds to pair.
- ·Fn+2@=Wireless device 2, short press to switch, long press for 3 seconds to pair.
- •Fn+3#=Wireless device 3, short press to switch, long press for 3 seconds to pair.

WINDOWS SYSTEM: FN KEY COMBINATION INSTRUCTIONS (MULTIMEDIA FUNCTIONS)

Key position	F1	F2	F3	F4	F5	F6
single press	F1	F2	F3	F4	F5	F6
Fn combination	Screen brightness -	Screen brightness +	Convert Window	Resource Manager	homepage	mailbox
Key position	F7	F8	F9	F10	F11	F12
single press	F7	F8	F9	F10	F11	F12

• MAC SYSTEM: FN KEY COMBINATION INSTRUCTIONS (MULTIMEDIA FUNCTIONS)

Key position	F1	F2	F3	F4	F5	F6
single press	Screen brightness -	Screen brightness +	Convert Window	Return to desktop	Search; Long press Siri	Screenshot
Fn combination	F1	F2	F3	F4	F5	F6
Key position	F7	F8	F9	F10	F11	F12
single press	Previous song	play / Pause	Next song	Mute	volume-	volume+
Fn combination	F7	F8	F9	F10	F11	F12

POWER DISPLAY

CHARGING



Connect the keyboard to the computer through the equipped USB cable to charge the keyboard. When charging, the red light of the [ESC] button remains on, and when fully charged, it follows the current light effect. When the red light on the [ESC] button flashes, please charge the keyboard in a timely manner.







·In 2.4G/wireless mode (without USB inserted), press and hold FN+B to check the battery level.



 It is recommended to only use the computer USB interface to charge the keyboard; Do not use a fast charging mobile phone charger to charge the keyboard; 3. Do not use inferior non-standard power adapters to charge the keyboard;

- 4. Do not use an overvoltage and overcurrent power adapter to charge the keyboard:
- Please stay away from high-temperature equipment when charging;
- 5. Please turn off the power switch when not in use for a long time.

ns also apply to other devices wit